

199762V


Changing the printed circuit board

Removing a damaged printed circuit board

- Switch off the power to the faucet.
- Close the water inlet to the faucet.
- Open the control box.
- Remove the connector (16) e.g. by prying off with a small screwdriver.
- Detach the wires (17) from the solenoid valve connectors (18).
- Detach the photocell cable (8) coming out of the spout from its connector (19).
- Detach the cover plate (22).
- Detach the locking screws (20).
- Remove a damaged printed circuit board.

Installing a new printed circuit board

- Place the new printed circuit board (21) into the control box and screw on the locking screws (20).
- Reattach the cover plate (22) with its locking screw (23).
- Reattach the wires (17) to the solenoid valve connectors (18).
- Push the photocell cable (8) back into the connector (19).
- Reattach the connector (16).
- Close the control box.
- Open the inlet to the faucet.
- Switch on the power to the faucet.

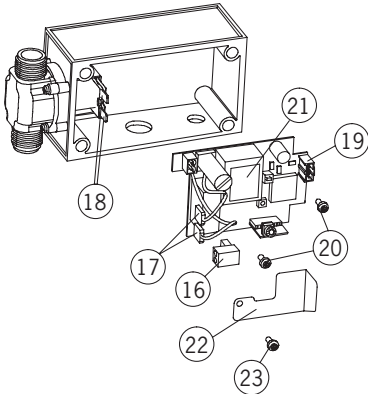


Piirikortin vaihto

Vioittuneen piirikortin poistaminen

- Kytke virta pois hanalta.
- Sulje vedentulo hanalle.
- Avaa ohjauslaatikon kansi.
- Irrota liitin (6) esim. kampeamalla pienellä ruuvitaltalla.
- Irrota johtimet (17) magneettiventtiin liittimistä (18).
- Irrota juoksuputkelta tuleva valokennon anturikaapeli (8) liittimestään (19).
- Irrota suojalevyyn kiinnitysruuvi (23).
- Poista suojalevy (22).
- Irrota piirikortin kiinnitysruuvit (20).
- Poista vioittunut piirikortti ohjauslaatikosta.

Uuden piirikortin asentaminen

- Asenna piirikortti (21) ohjauslaatikkoon ja kierrä kiinnitysruuvit (20) paikoilleen.
- Kiinnitä suojalevy (22) paikalleen kiinnitysruuvilla (23).
- Työnnä johtimet (17) magneettiventtiin liittimiin (18).
- Työnnä valokennon anturikaapeli (8) liittimeen (19).
- Työnnä liitin (16) paikoilleen.
- Sulje ohjauslaatikon kansi.
- Avaa vedentulo hanalle.
- Kytke virta hanalle

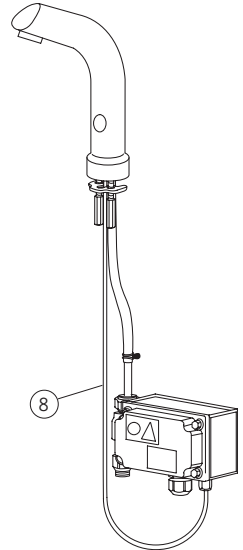

Finland
Oras Oy
Isometsäntie 2
P.O. Box 40
FI-26101 Rauma
Puh. +358 (0)2 83 161
Fax +358 (0)2 831 6300
Info.Finland@oras.com



945483/04/06